



Hoover's quick & snappy start up guide.

60 cm Slideout
Rangehood



Model #: **HV-C60RS**
Version #: **V1.0**
After Sales Support **1300 886 649**

Let's get your rangehood up and running!

Welcome to your new Hoover rangehood! We hope that this product brings you many years of enjoyment.

NOTE: This rangehood must be professionally installed to an appropriately earthed wiring system by a licensed electrician. Do not try to install the rangehood yourself. Doing so will expose you to danger and could invalidate any warranty or liability claims.

Comprehensive installation instructions, diagrams and safety advice are provided in the supplied instruction manual. Make sure to make it available to the installer.

Venting Modes

 
 
 
 
- Before installing the rangehood, please check and ensure that the two levers on the motor are set to the desired venting mode - "DUCTING" (right) or "RECIRCULATING" (left) (see Fig. 1).

Indoor Circulation Mode

- This mode will vent the air back into the kitchen (see Fig. 2a). It should only be used when it is not possible to use the outdoor ducting mode.
- To ensure that the mode is correct, remove the aluminium mesh filters and check that the two levers are in the "RECIRCULATING" position.
- If you intend to use the rangehood with the air recirculating back into the kitchen, it is important that you use charcoal filters (see Fig. 2b) to absorb some of the cooking odours (see page 11 of the instruction manual for more information on how to purchase and install these filters).

Outdoor Ducting Mode

- This is the recommended extraction mode wherever possible for optimum performance. If you are able to install the exhaust duct to vent the air outside (see Fig. 2c) and operate your rangehood in outdoor ducting mode, have your licensed installer follow the instructions on page 10 of the instruction manual.
- You will need to remove the charcoal filters and cover the front air outlet with the vent cover (see Fig. 2d) when using this mode.

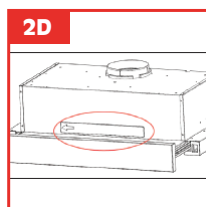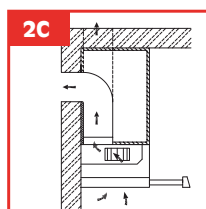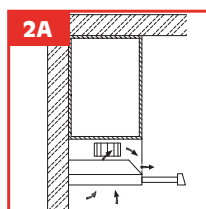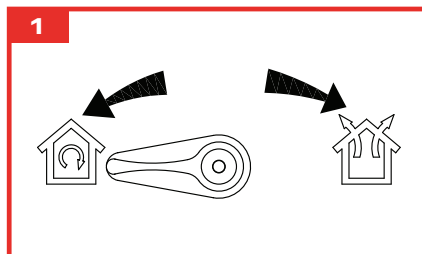


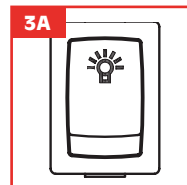 
Switching on/off

- After the rangehood has been properly installed, insert the power plug into an appropriate electrical outlet and let the unit run for a few minutes prior to using it while cooking.
- Make sure the rangehood is properly connected to the power supply and the power is switched on at the outlet.

Controls

 
This switch turns the rangehood lights either on or off (see Fig. 3a).

-  Turns the rangehood lights ON.
- (Blank) Turns the rangehood lights OFF.



This button switches the rangehood on and toggles between the fan speed settings: HIGH, LOW, OFF (see Fig. 3b).

- = Turns on the fan motors to HIGH speed for maximum extraction.
- O Turns off the fan motors for no extraction; the rangehood is switched OFF.
- - Turns on the fan motors to LOW speed for minimum extraction.

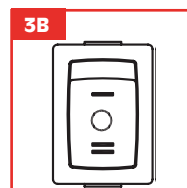

Operation

- Pull out the front panel (see Fig. 4).
- Switch the rangehood lights on, if desired.
- Select the desired fan speed. The rangehood will start operation at the set fan speed.
- Close the front panel and the rangehood will stop working.
- The next time the front panel is pulled back out, the rangehood will start working at the previously set level.

NOTE: The rangehood will only operate once the slide-out panel is pulled outwards towards the kitchen.

