



Hoover's quick & snappy start up guide.

13 Place Dishwasher
(Stainless Steel / Dark Stainless Steel)

Model #: HV-D13SS / HV-D13DSS

Version #: V1.0

After Sales Support 1300 886 649

Let's get your 13 place dishwasher up and running!

Welcome to your new Hoover dishwasher! We hope that this product brings you many years of enjoyment.

CAUTION! This dishwasher is heavy - ensure you have a helper or mechanical aid to move it.

NOTE: This dishwasher must be professionally installed by a licensed plumber or dishwasher installer.. Do not install the unit yourself. Doing so will expose you to danger and void the warranty.

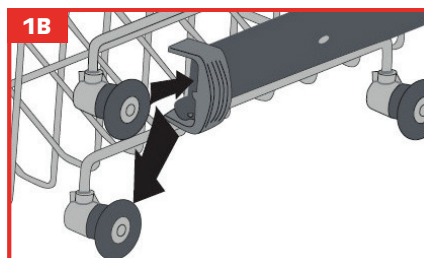 
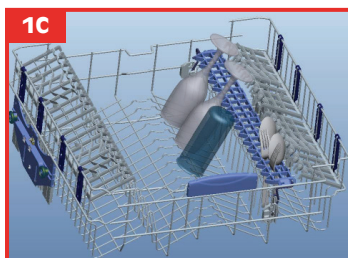 
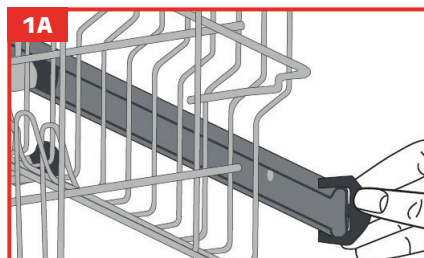 
Comprehensive installation instructions, diagrams and safety advice are provided in the supplied instruction manual. Make sure to make it available to the installer.

Installation






 

- This dishwasher can be recessed under a benchtop, or used as a freestanding unit.
- This unit must be positioned on a level and sturdy floor. If the floor is uneven, adjust the levelling feet until it reaches a horizontal position.
- When installing the unit, ensure it is positioned close to an existing water inlet and drain connection. Ensure there is a power point nearby, or in an adjoining cabinet. Only use the new supplied hoses when connecting this dishwasher to the water supply.
- **Please refer to pages 9-13 in the manual for comprehensive installation instructions.**

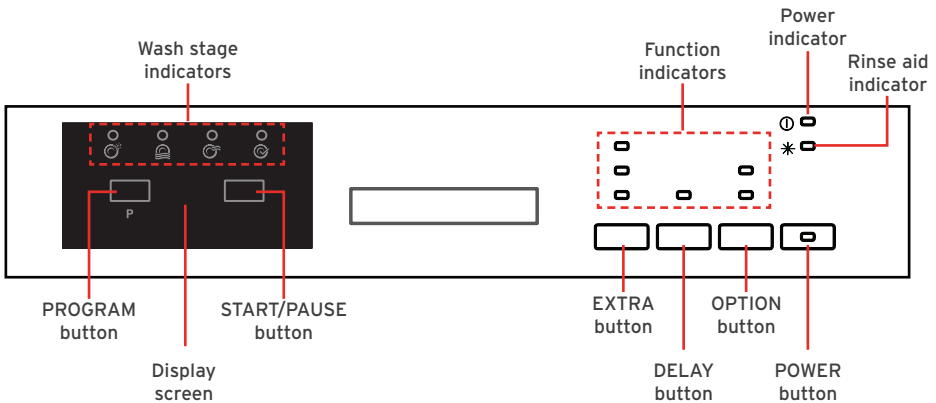 
Adjustments

- To adjust the height of the upper basket, turn the rail stop clips (at the ends of the rails) to the sides to open them (Fig. 1A), then pull out and remove the basket. Change the position of the wheels, then reinstall the basket to the rail (Fig. 1B), making sure to close the rail stop clips. When the upper basket is in the higher position, large items such as pans can be placed in the lower basket.
- The upper basket cutlery rack has been designed for the placement of long-stemmed utensils, as well as cutlery (Fig. 1C). The rack has four different positions. There is also a removable cutlery basket included in the machine.
- See pages 20-24 of the instruction manual for more information on loading the dishwasher.




 


 


Loading

- Open the door of the dishwasher and load the lower basket first, then the upper basket, pulling each drawer out for ease of access. Add dishwasher detergent and rinse aid (if applicable) according to the instructions.
- Close the dishwasher door, before pressing the **POWER** button [] on the control panel.
- Select the desired wash program by pressing the **PROGRAM** button [] repeatedly, until the desired program code is shown on the display screen (see pages 14-15 of the instruction manual), then press the **START/PAUSE** button []. The wash stage indicators will illuminate to show which part of the cycle is currently occurring (washing [], rinsing [], drying [] and end []).



Instructions

- Before starting the desired program, you can also set a number of extra features to customise your wash cycle.
- **DELAY** []: Press this button repeatedly to set a delay start time of up to 19 hours, in one-hour increments. The corresponding indicator light (above the DELAY button) will illuminate. The delay time will appear on the display screen.
- **HALF LOAD**: This option will shorten the durations of the selected programs to reduce power and water consumption, and is ideal for smaller loads of dishes. Press the OPTION button [] once to activate it. The corresponding indicator light [] will illuminate.
- **TABLET FUNCTION**: If you are using combined detergents that contain salt, rinse aid or extra features, press the OPTION button for the second time and activate the tablet function. The corresponding indicator light [] will illuminate.
- **HYGIENE**: Press the EXTRA button once to activate this function, which will change the washing temperature and durations of the current program for a more sanitary wash. The corresponding indicator light [] will illuminate.
- **EXTRA RINSE**: Press the EXTRA button again to activate this function, which will add extra rinses to the selected program. The corresponding indicator light [] will illuminate.
- **EXTRA DRY**: Press the EXTRA button again to activate this function, which will extend the program's drying time. The corresponding indicator light [] will illuminate.
- **NOTE**: The **HYGIENE** and **EXTRA DRY** functions cannot be selected at the same time.



Hope you enjoy your new Hoover dishwasher!