



Hoover's quick & snappy start up guide.

529 L Bottom Mount Refrigerator

Model #: HV-RBM529
Version #: V1.0
After Sales Support 1300 886 649

Let's get your refrigerator up and running!


Welcome to your new Hoover bottom mount refrigerator! We hope that this product brings you many years of enjoyment.

Comprehensive installation instructions, diagrams and safety advice are provided in the supplied instruction manual.

CAUTION! The unit is heavy - transport it with care! To avoid back or other injury, we recommend you ask someone for help or use a mechanical aid when moving it.

Installation

- Before you start installing your new top mount refrigerator, wipe the interior surfaces and accessories with a well wrung out cloth moistened with lukewarm water with a little baking soda added. This will remove any dust from transit and storage and help remove the typical smell of a brand new product. Dry thoroughly.
- The fridge is designed for freestanding use. The floor must be strong, sturdy and level—adjust the levelling feet, if necessary. Avoid areas where the fridge would be exposed to direct sunlight, heat, extreme cold ambient temperatures or excessive moisture and high humidity. Installing it in the coolest area of the room will save energy consumption and running costs. Allow at least 10 cm clear space at the back and 10 cm at the sides so air can circulate freely around the fridge (Fig. 1).

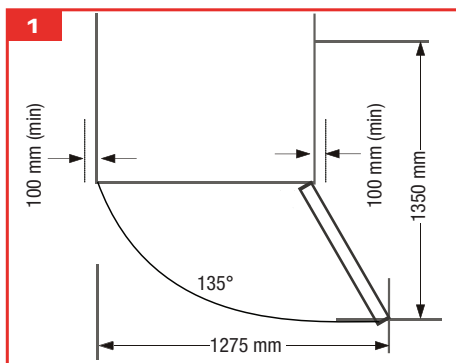


Setting Up

- Before plugging in your new fridge, let it stand upright for at least 4 hours to allow the refrigerant gases to settle into the compressor.
- Plug in the fridge and secure the power supply cord behind the unit, making sure the plug is accessible after installation.
- When first starting up, and after a period out of use, allow the unit to cool down on the coldest settings (in both compartments) for at least 2-3 hours before placing perishable food in the fridge.

Temperature regulation


- This refrigerator has a temperature control panel (Fig. 2) at the top of the fridge compartment. The fridge and freezer compartments have independent controls so you can adjust the temperature in each compartment separately according to the food stored. For each compartment, you can choose between three temperature levels.

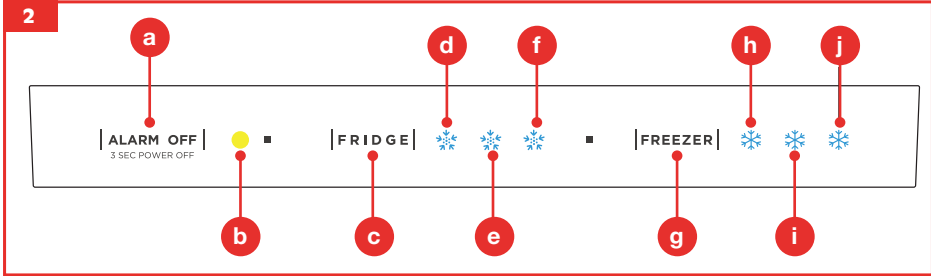

- To adjust the fridge temperature, press the [FRIDGE] button (c) repeatedly. The temperature will change and the LEDs (d, e, and f) will illuminate, as the fridge changes from cold to colder to coldest.
- To adjust the freezer temperature, press the [FREEZER] button (g) repeatedly. The temperature will change and the LEDs (h, i, and j) as the freezer changes from cold to colder to coldest.
- When the fridge or freezer door is kept open for more than 120 seconds, an alarm will sound until the door has been properly closed. Alternatively, press the [ALARM OFF] button (a) to turn off the alarm.

Inside the fridge and freezer

- The interior of the fridge and freezer compartments (Fig. 3) have a variety of storage solutions to keep your chilled and frozen products organised.
- The freezer compartment is equipped with a wire shelf (A) and wire basket (B) for convenient access and organised storage. It is suitable for freezing domestic quantities of fresh food and long-term storage (up to three months) of frozen food.
- The fridge compartment is suitable for short-term storage of all your fresh food. The walls of the fridge are equipped with a series of runners (C) so that you can position the glass shelves (D) to suit your individual storage requirements.
- The door balconies (E) in the fridge compartment are suitable for storage of food and drink bottles, cans and jars. They may be placed at different heights: gradually pull a balcony up until it is free, then reposition it as required.
- The easy-to-pull-out crisper drawer (F) is covered with a glass shelf to help you keep your fruit and vegetables fresh.

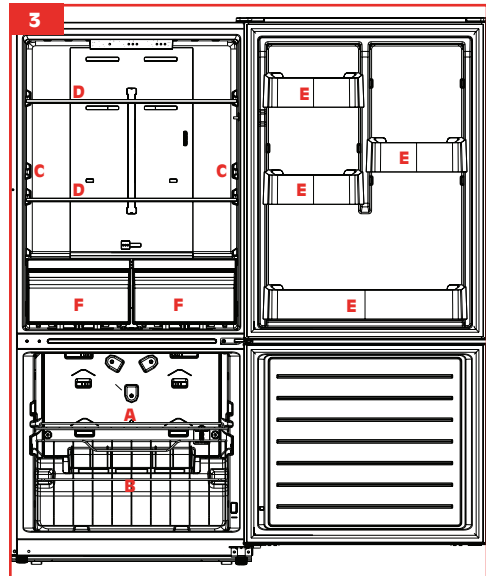

Hope you enjoy your new Hoover bottom mount refrigerator.